



BV3405 B3405

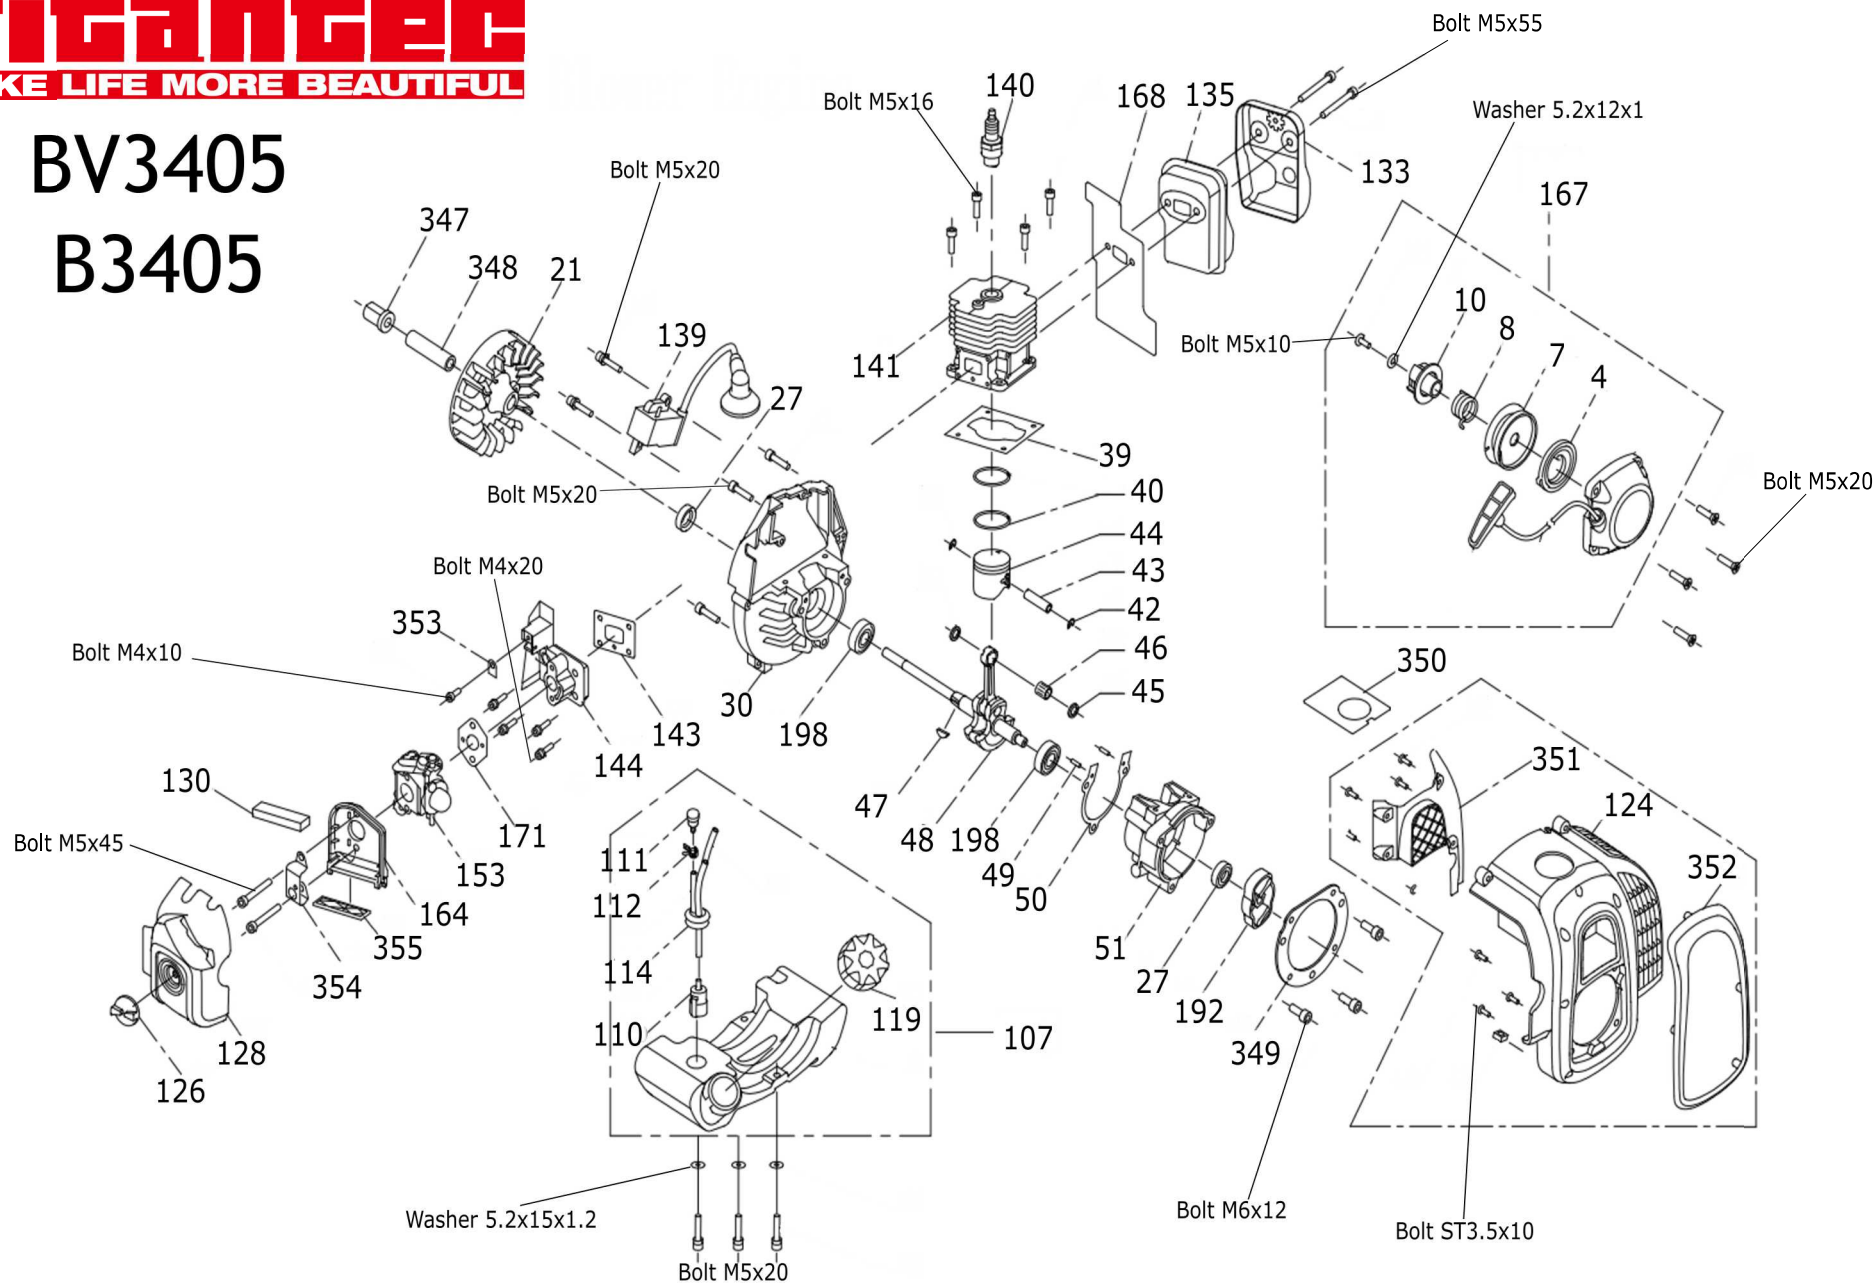

BV3405 B3405

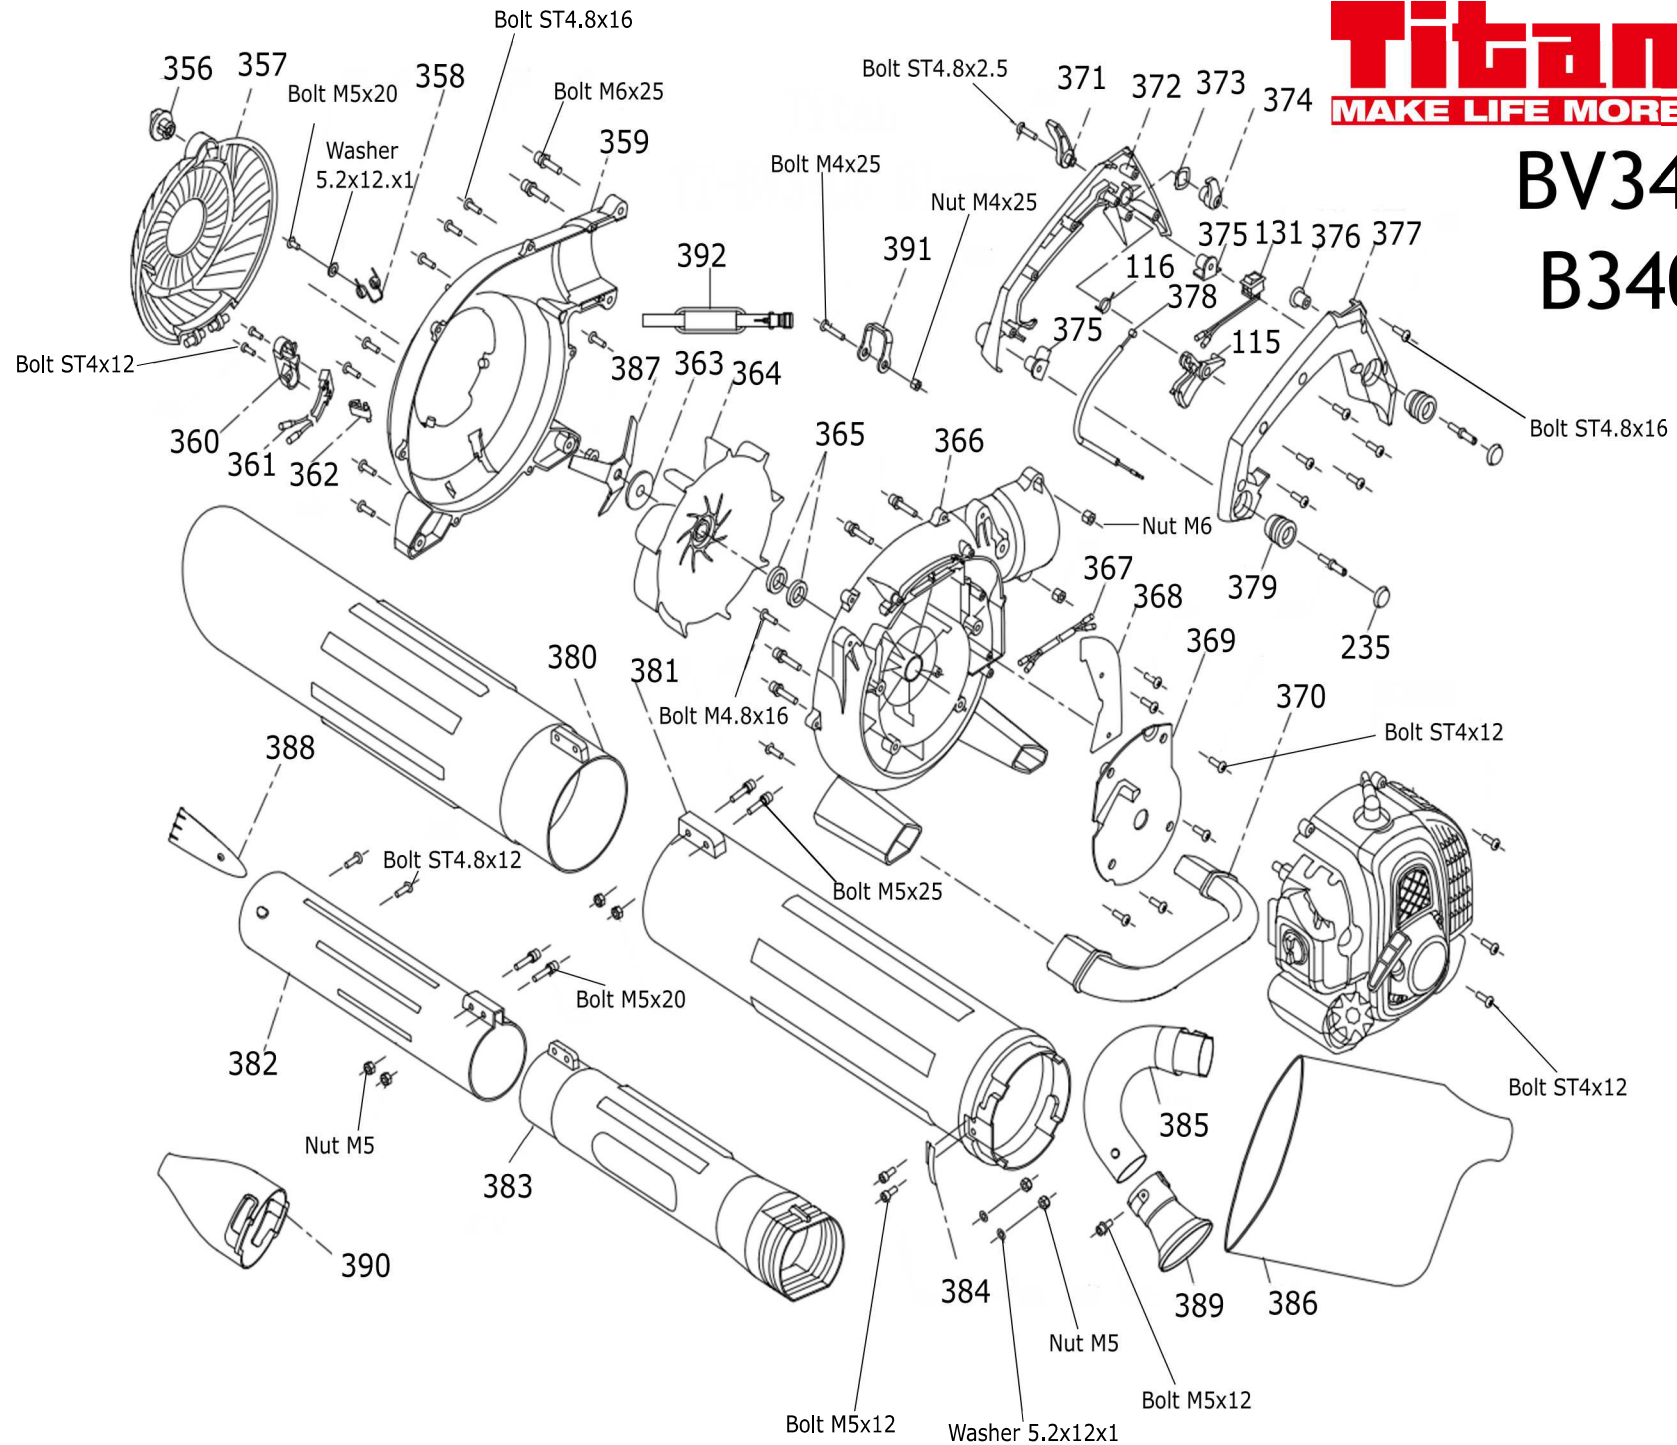



BV3405 & B3405

Ref	Description	Part number
2	starter Knob	TT00208
4	Spring	TT00407
7	Reel	TT00704
8	Torsion Spring	TT00808
10	Ratchet	TT01007
21	Flywheel	TT02111
27	oil seal 12x22x7	TT02701
30	Left Crankcase	TT03010
39	Gasket, Cylinder	TT03907
40	Piston Ring	TT04011
42	Snap Ring, Piston Pin	TT04205
43	Piston Pin	TT04311
44	Piston	TT04411
45	washer	TT04505
46	Needle bearing	TT04611
47	Key 3x10	TT04701
48	Crankshaft	TT04811
49	Pin 5x10	TT04901
50	Gasket, Crankcase	TT05007
51	Right Crankcase	TT05111
107	fuel tank	TT10708
110	Fuel Filter	TT11001
111	Balancer	TT11101
112	Balancer seat	TT11204
114	Pipe Seat	TT11402
115	Throttle trigger	TT11505
116	Torsion spring trigger	TT11604
119	Cap fuel filter	TT11902
124	Cover, Cylinder	TT12408
126	Knob	TT12606
128	Cover Filter	TT12808
130	element	TT13007
131	on/off switch	TT13105
133	Heat insulation muff;er	TT13306
135	muffler	TT13507
139	coil	TT13911
140	spark plug L8RTF	TT14003
141	cylinder	TT14111
143	gasket inlet pipe	TT14304
144	inlet pipe	TT14408
153	carb	TT15311

Ref	Description	Part number
164	Air Filter Supporter	TT16405
167	starter assy	TT16707
168	gasket muffler	TT16806
171	gasket carburetor	TT17110
189	engine	TT18910
192	pulley	TT19204
198	bearing 6001	TT19801
235	Dustproof cover	TT23501
347	Impeller shaft	TT34701
348	Sleeve 8.5x14x52	TT34801
349	Connection plate starter	TT34901
350	Cylinder cover plate	TT35001
351	Guide plate	TT35101
352	Decorated frame	TT35201
353	Bearing plate	TT35301
354	Air filter plate	TT35401
355	air filter net	TT35501
356	lock nut	TT35601
357	Fan cover	TT35701
358	torsion spring safety	TT35801
359	Fan Volute Cover	TT35901
360	Flameout switch cover	TT36001
361	flameout switch	TT36101
362	rotary valve	TT36201
363	washer	TT36301
364	impeller	TT36401
365	bearing 61802	TT36501
366	Fan Volute Cover	TT36601
367	connection lines	TT36701
368	heat insulation fan volute	TT36801
369	back plate fan volute	TT36901
370	handgrip	TT37001
371	self locking handle	TT37101
372	left handle	TT37201
373	wave washer	TT37301
374	self locking device	TT37401
375	handle anti vibration rubber	TT37501
376	position rubber	TT37601
377	right handle	TT37701
378	throttle line	TT37801
379	damper	TT37901
380	down suction pipe	TT38001
381	upper suction pipe	TT38101
382	down blower pipe	TT38201
383	upper blower pipe	TT38301
384	Flameout plate	TT38401



Ref	Description	Part number
385	Connector pipe	TT38501
386	collection bag	TT38601
387	shredded blade	TT38701
388	blower pipe partition	TT38801
389	suction air duct joint	TT38901
390	blower pipe joint	TT39001
391	Hook	TT39101
392	single shoulder strap	TT39201