




Updated 2024

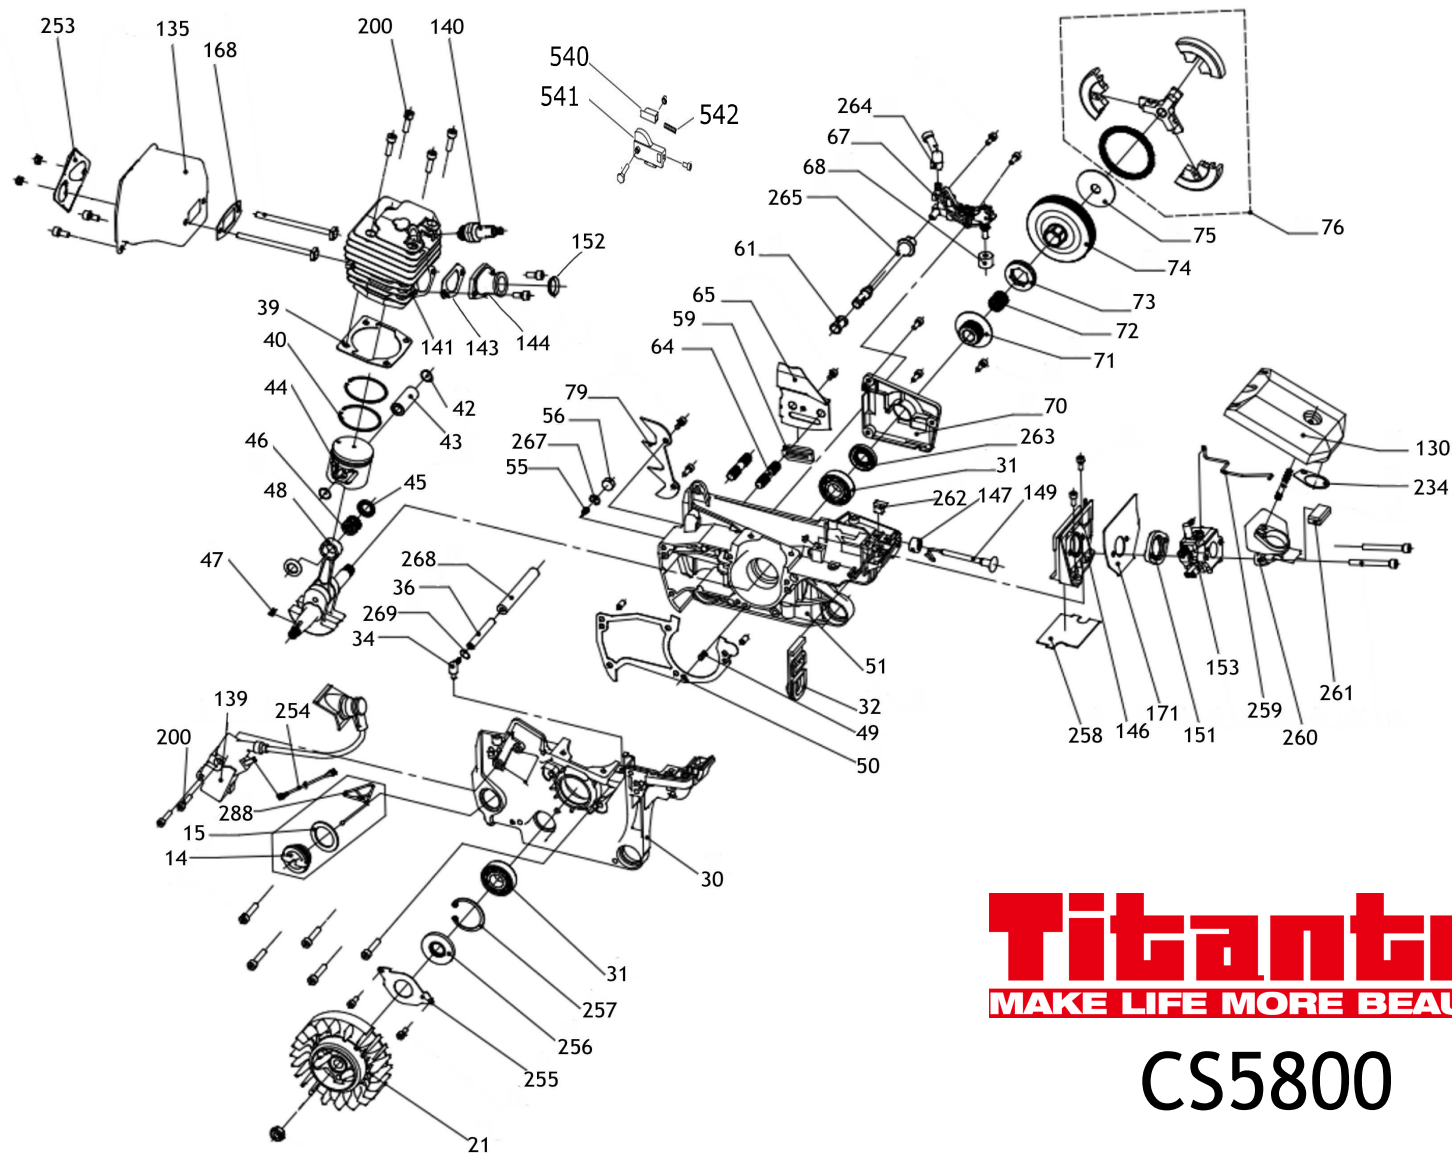

Titantec®
MAKE LIFE MORE BEAUTIFUL

CS5800

CS5800

Ref	Description	Part number
4	Spring	TT00406
5	Spring box	TT00504
7	Reel	TT00703
8	Torsion Spring	TT00807
10	Ratchet	TT01005
11	Washer	TT01103
13	Shroud	TT01303
14	Oil cap	TT01402
15	Seal oil cap	TT01501
17	Palm oil Cap	TT01701
21	Flywheel	TT02109
30	Left Crankcase	TT03008
31	Bearing 6202	TT03101
32	Dustproof plate	TT03203
34	Negative pressure nozzle	TT03401
36	Negative pressure tube	TT03601
39	Gasket, Cylinder	TT03909
40	Piston Ring	TT04009
42	Snap Ring, Piston Pin	TT04203
43	Piston Pin	TT04309
44	Piston	TT04409
45	elastic ring needle bearing	TT04501
46	Needle bearing	TT04609
47	Key 3x10	TT04701
48	Crankshaft	TT04809
49	Pin 5x10	TT04901
50	Gasket, Crankcase	TT05009
51	Right Crankcase	TT05108
55	vent	TT05502
56	sponge vent	TT05602
59	Guide chain block	TT05902
61	oil filter	TT06101
64	Bolt M8x42	TT06401
65	Plate injector	TT06503
67	oil pump	TT06703
68	sponge oil pump	TT06801
70	plate oil pump	TT07003
71	worm	TT07103
72	needle bearing	TT07203
73	sprocket	TT07301
74	Drum	TT07401
75	Spacer clutch	TT07501
76	Clutch	TT07602



Ref	Description	Part number
79	Wooden teeth	TT07902
80	Plate braker spring	TT08002
83	Braker lever	TT08303
84	Braker lever connecting piece	TT08401
85	Brake band connectin rod	TT08501
86	Brake band	TT08602
87	Positioning pin	TT08702
91	main spring braker	TT09101
92	Tension cover	TT09203
93	Adjusting screw pin	TT09301
95	adjusting screw gear	TT09501
97	Braker cover	TT09702
107	Fuel tank	TT10707
108	Trigger control arm	TT10804
109	rear handle cover	TT10903
110	Fuel Filter	TT11001
111	Balancer	TT11105
112	Balancer seat	TT11201
115	Throttle trigger	TT11504
116	Torsion spring trigger	TT11603
118	Seal fuel cap	TT11801
119	Cap fuel filter	TT11901
120	Handle	TT12004
124	Cover, Cylinder	TT12407
128	Cover Filter	TT12807
130	element	TT13006
131	on/off switch	TT13104
135	muffler	TT13506
139	coil	TT13909
140	spark plug L7T	TT14002
141	cylinder	TT14109
143	gasket inlet pipe	TT14306
144	inlet pipe	TT14407
146	carb supporter	TT14602
147	damper rod	TT14703
149	Choke rod	TT14903
151	intake flange	TT15101
152	circle	TT15201
153	carb	TT15309
159	Guide bar 18"	TT15901
159	Guide bar 16"	TT15904
160	Chain 18"	TT16001
160	Chain 16"	TT16004
161	Cover guide bar 18"	TT16101
165	fuel pipe	TT16504
167	starter assy	TT16706

Ref	Description	Part number
168	gasket muffler	TT16805
171	gasket carburetor	TT17108
200	Cylinder bolt M5x20	TT20002
234	Ring air filter	TT23402
235	Dustproof cover	TT23501
238	Big Dustproof cover	TT23802
241	Braker assy	TT24102
248	front guard	TT24802
253	Muffler Lap	TT25301
254	Flameout line	TT25401
255	oil seal clamp	TT25501
256	oil seal 15x35x7	TT25601
257	circlip	TT25701
258	dustproof gasket	TT25801
259	Throwout lever	TT25901
260	intake pipe	TT26002
261	intake pipe damper	TT26101
262	Choker rod seat	TT26201
263	oil seal 15x28x5	TT26301
264	Oil outer pipe	TT26401
265	oil inter pipe	TT26501
267	elastic ring	TT26701
268	anti scald tube	TT26801
269	shrink spring	TT26901
272	pin 6x28	TT27202
279	snap for air filter	TT27901
280	Gas deflector	TT28001
281	conical pressure spring	TT28101
282	conical spring seat	TT28201
283	chain blocker	TT28301
284	long damping seat	TT28401
285	double pin	TT28501
286	cylindrical damper	TT28601
287	cover cap	TT28701
288	board oil cap	TT28801
292	circlip 4	TT29201
293	snapped rivet 3x13	TT29301
294	snapped rivet 3x9	TT29401
295	chain guider	TT29501
540	Limit ejector lever	TT54001
541	Brake locating block	TT54101
542	Spring, Limit ejector lever	TT54201