


CS598

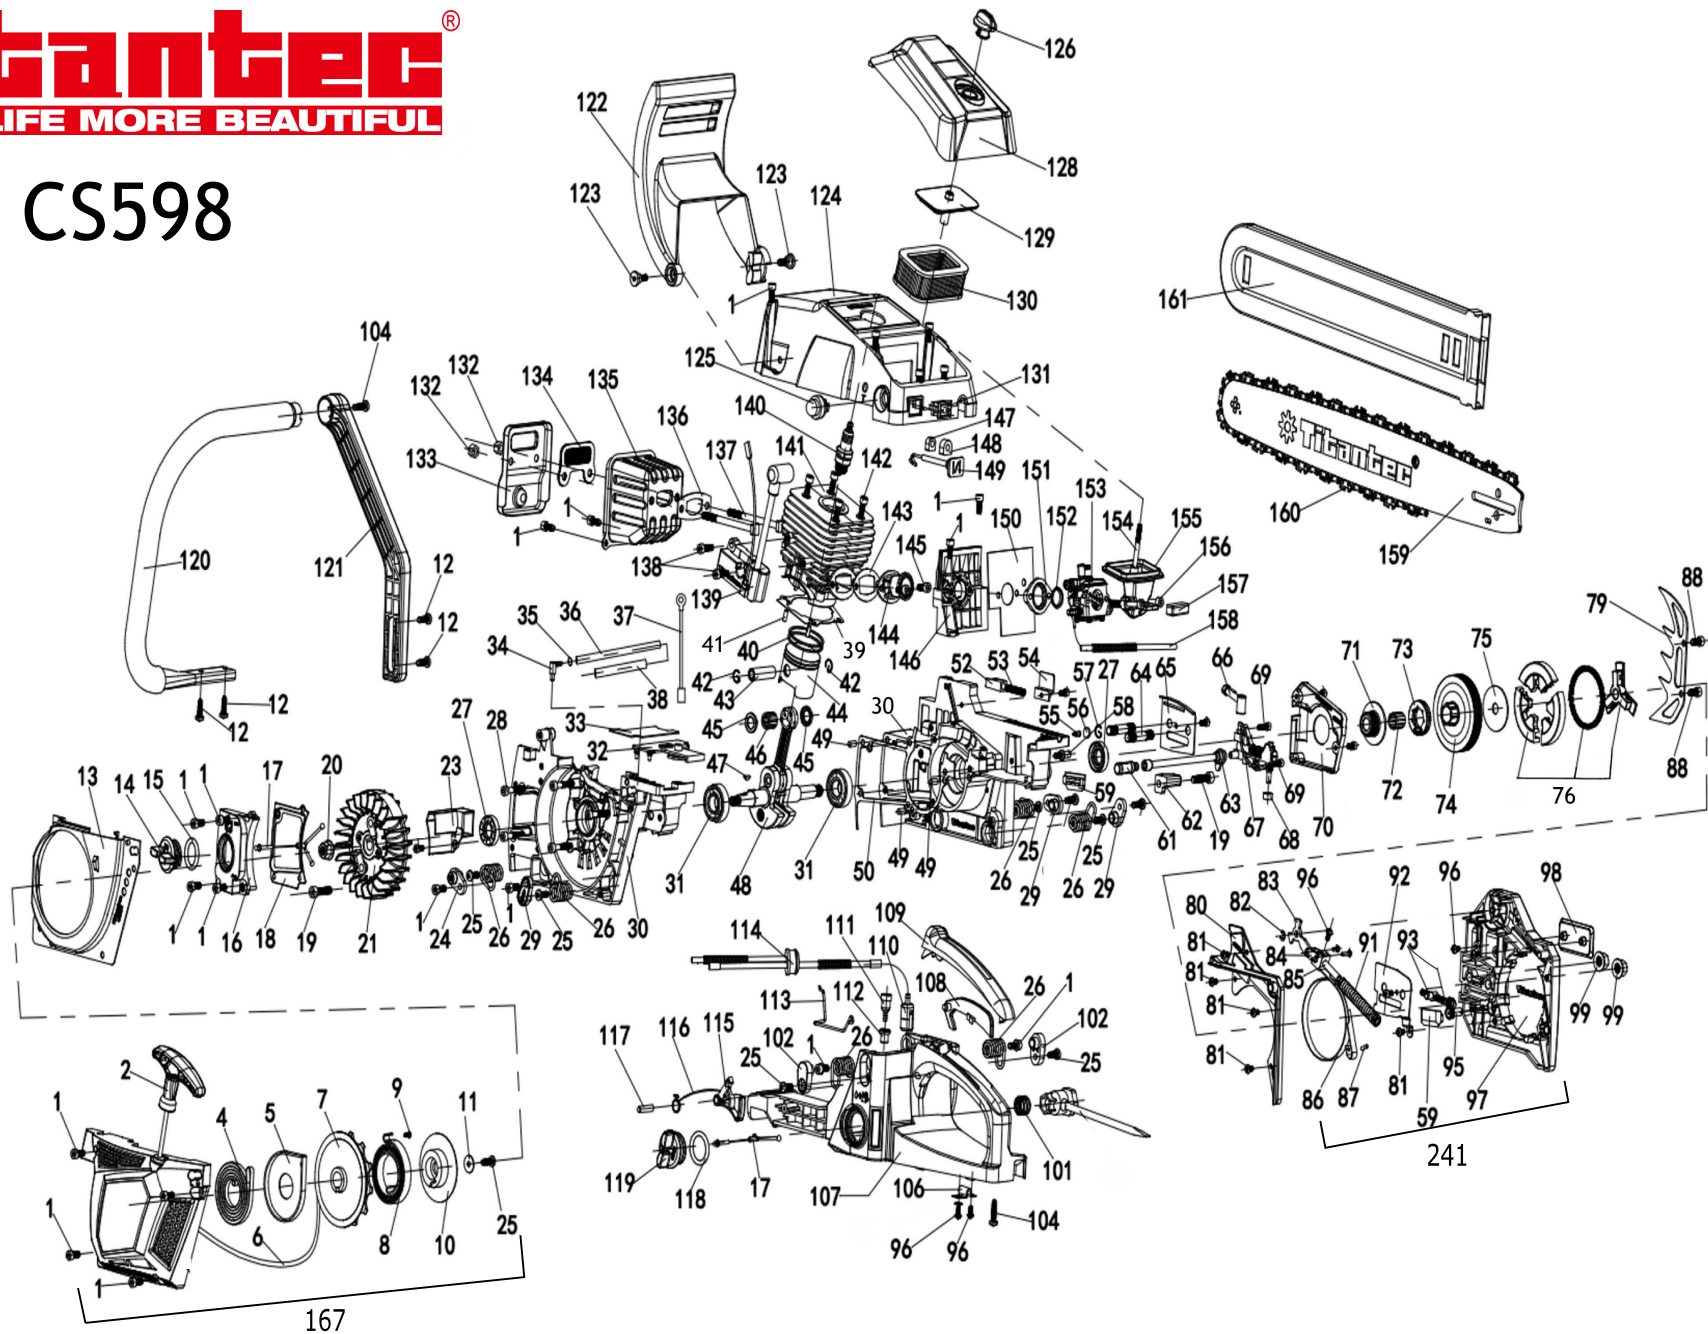

CS598

Ref	Description	Part number
1	Bolt M5x14	TT00101
2	starter Knob	TT00203
3	starter cover	TT00303
4	Spring	TT00403
5	Spring box	TT00501
6	Rope	TT00601
7	Reel	TT00703
8	Torsion Spring	TT00804
9	Bolt ST3x8	TT00901
10	Ratchet	TT01003
11	Washer	TT01101
12	Bolt ST5x16	TT01201
13	Shroud	TT01301
14	Oil cap	TT01401
15	Seal oil cap	TT01501
16	Side cover oil tank	TT01601
17	Palm oil Cap	TT01701
18	Gasket side cover	TT01801
19	Bolt M6x25	TT01901
20	Flange nut M8	TT02001
21	Flywheel	TT02106
23	Draft tube	TT02301
24	AL plate anti vibration	TT02401
25	Bolt STx14	TT02501
26	anti vibration spring	TT02601
27	oil seal 15x28x7	TT02703
29	Plate anti vibration spring	TT02901
30	Left & Right Crankcase	TT03005
31	Bearing 6202	TT03101
32	Dustproof plate	TT03201
33	Gasket bottom plate	TT03301
34	Negative pressure nozzle	TT03401
35	Spring nozzle	TT03501
36	Negative pressure tube	TT03601
37	Ground wire	TT03701
38	anti scald tube	TT03801
39	Gasket, Cylinder	TT03906
40	Piston Ring	TT04006
41	Pin	TT04101
42	Snap Ring, Piston Pin	TT04203
43	Piston Pin	TT04306
44	Piston	TT04406
45	elastic ring needle bearing	TT04501

Ref	Description	Part number
46	Needle bearing	TT04606
47	Key 3x10	TT04701
48	Crankshaft	TT04806
49	Pin 5x10	TT04901
50	Gasket, Crankcase	TT05006
52	Limit ejector	TT05201
53	spring limit ejector	TT05301
54	Plate spring	TT05401
55	vent	TT05501
56	sponge vent	TT05601
57	Circlip vent	TT05701
58	Bolt M5x10	TT05801
59	Guide chain block	TT05901
61	oil filter	TT06101
62	Stop chain block	TT06201
63	oil tube	TT06301
64	Bolt M8x42	TT06401
65	Plate injector	TT06501
66	injector	TT06601
67	oil pump	TT06701
68	sponge oil pump	TT06801
69	Bolt M4x14	TT06901
70	plate oil pump	TT07001
71	worm	TT07101
72	needle bearing 12x15x14.5	TT07201
73	sprocket	TT07301
74	Drum	TT07401
75	Spacer clutch	TT07501
76	Clutch	TT07604
79	Wooden teeth	TT07901
80	Plate braker spring	TT08001
81	Bolt M4x8	TT08101
82	Snap ring 5	TT08201
83	Braker lever	TT08301
84	Braker lever connecting piece	TT08401
85	Brake band connectin rod	TT08501
86	Brake band	TT08601
87	Positioning pin	TT08701
88	Bolt M5x10	TT08801
91	main spring braker	TT09101
92	Tension cover	TT09201
93	Adjusting screw pin	TT09301
95	adjusting screw gear	TT09501
96	Bolt ST4x8	TT09601

Ref	Description	Part number
97	Braker cover	TT09701
98	Plate braker	TT09801
99	lange nut M8x1.25	TT09901
101	Spring socket	TT10101
102	plate anti viraton spring	TT10201
104	Bolt ST5x20	TT10401
106	Spacer socket	TT10601
107	Fuel tank	TT10704
108	Trigger control arm	TT10801
109	rear handle cover	TT10901
110	Fuel Filter	TT11004
111	Balancer	TT11101
112	Balancer seat	TT11201
113	Throttle push rod	TT11301
114	Pipe Seat	TT11404
115	Throttle trigger	TT11501
116	Torsion spring trigger	TT11601
117	Pin 6x25	TT11701
118	Seal fuel cap	TT11801
119	Cap fuel filter	TT11904
120	Handle	TT12001
121	Handle stand	TT12101
122	Top Cover	TT12203
123	Bolt M5x12	TT12301
124	Cover, Cylinder	TT12404
125	bubble	TT12501
126	Knob	TT12603
128	Cover Filter	TT12804
129	Plate air filter	TT12901
130	element	TT13003
131	on/off switch	TT13101
132	nut M6	TT13201
133	Muffler Heat Shield	TT13305
134	net	TT13401
135	muffler	TT13503
136	gasket muffler	TT13601
137	bolt M6x86	TT13701
138	Bolt M5x16	TT13801
139	coil	TT13906
140	spark plug BM6A	TT14001
141	cylinder	TT14106
142	Bolt M5x20	TT14201
143	gasket inlet pipe	TT14303
144	inlet pipe	TT14404
145	Bolt M5x10	TT14501



Ref	Description	Part number
146	Carb bracket	TT14601
147	Small damper rod	TT14701
148	Big damper rod	TT14801
149	Choke rod	TT14901
150	Carb braket pad	TT15001
151	intake flange	TT15101
152	circle	TT15201
153	carb	TT15306
154	Bolt M5x32	TT15401
155	intake elbow	TT15501
156	Bolt M5x50	TT15601
157	Damper intake elbow	TT15701
158	inlet pipe	TT15801
159	Guide bar 18"	TT15901
159	Guide bar 16"	TT15904
160	Chain 18"	TT16001
160	Chain 16"	TT16004
161	Cover guide bar 18"	TT16101
167	Recoil starter	TT16711
241	Breaker assy	TT24105