


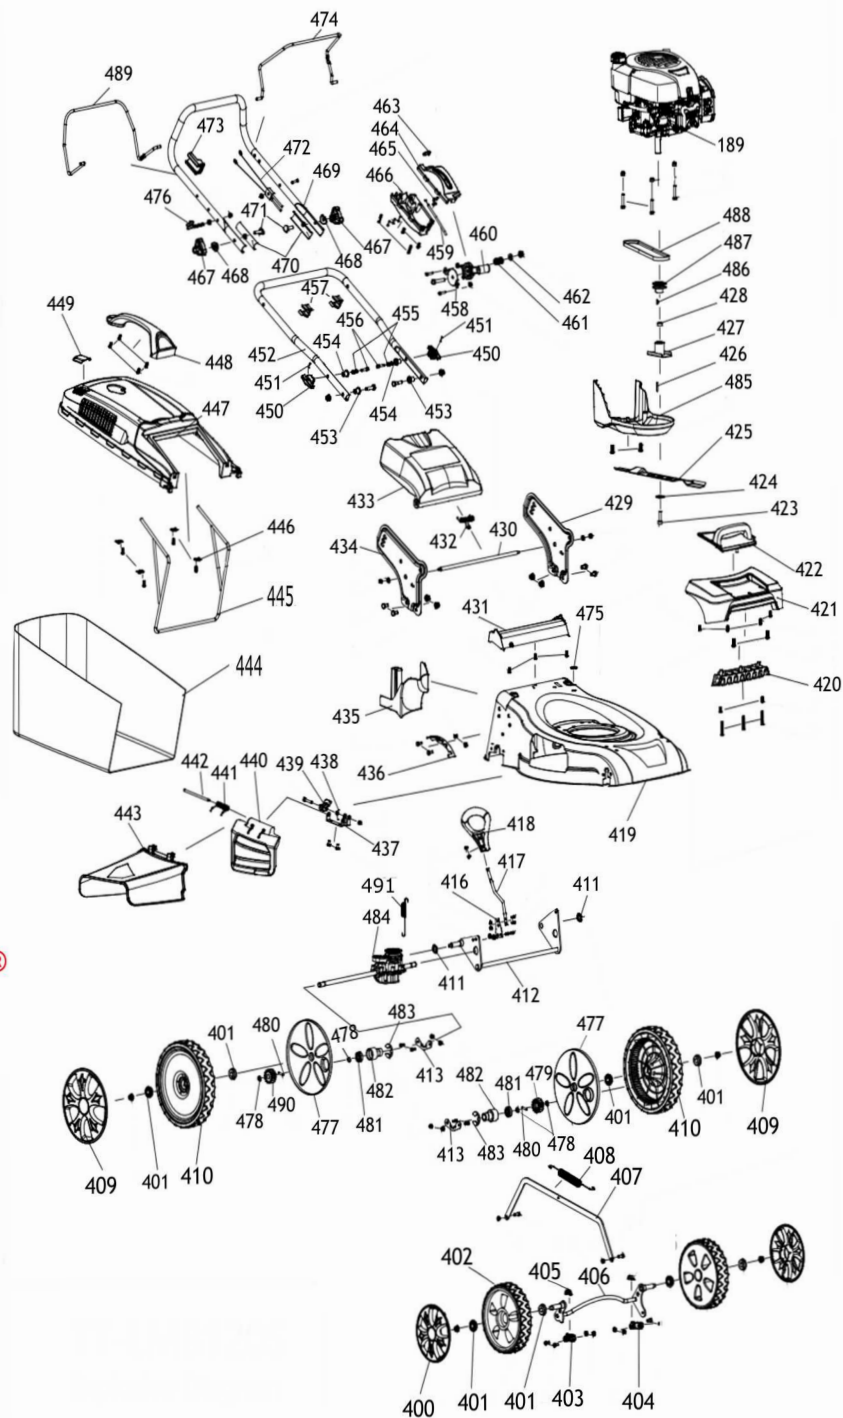

Titanteec®
MAKE LIFE MORE BEAUTIFUL

LMB120S

LMB120S

Ref	Description	Part number
189	Engine	on request
400	wheel cap	TT40001
401	wheel bearing	TT40101
402	wheel	TT40201
403	axle sleeve right	TT40301
404	axle sleeve left	TT40401
405	axle sleeve front	TT40501
406	front axle	TT40601
407	height adjust bar	TT40701
408	height adjust spring	TT40801
409	Wheel cap	TT40902
410	wheel	TT41002
411	washer	TT41101
412	rear axle	TT41201
413	shaft sleeve	TT41301
416	block rod spring plate	TT41601
417	height lever	TT41701
418	adjusting height hand	TT41801
419	chassis	TT41902
420	front panel	TT42001
421	front panel	TT42101
422	front cover	TT42201
423	Bolt	TT42301
424	gasket	TT42401
425	Blade	TT42501
426	Key	TT42601
427	apron	TT42701
428	Spacer	TT42801
429	left handle plate	TT42901
430	Brck cover pin	TT43001
431	rear cover	TT43101
432	rear cover spring	TT43201
433	rear cover plate	TT43301
434	right handle plate	TT43401
435	straw blocking	TT43501
436	gear plate	TT43601
437	side row cover	TT43701
438	side row cover spring	TT43801
439	side row cover pick	TT43901
440	side row cover	TT44001
441	side cover spring	TT44101
442	side row cover bolt	TT44201
443	side row fan cover	TT44301

Ref	Description	Part number
444	bag	TT44401
445	bag support	TT44501
446	support press plate	TT44601
447	bag top cover	TT44701
448	bag handle	TT44801
449	bag cover	TT44901
450	lower handle knob	TT45001
451	pin	TT45101
452	lower handle	TT45201
453	knob pin lower	TT45301
454	knob pin upper	TT45401
455	knob pressure spring	TT45501
456	knob pin shaft	TT45601
457	cable clip	TT45701
458	handle seat	TT45801
459	throttle pull	TT45901
460	throttle handle	TT46001
461	thottle switch pressure spring	TT46101
462	Washer	TT46201
463	mask button block	TT46301
464	upper righth mask	TT46401
465	throttle pull down plate	TT46501
466	lower right mask	TT46601
467	handle knob	TT46701
468	saddle gasket	TT46801
469	upper armrest	TT46901
470	insulating spacer	TT47001
471	saddle bolt	TT47101
472	start cable	TT47202
473	pull rod right limit block	TT47301
474	starter lever	TT47401
475	cover	TT47501
476	cord buckle	TT47601
477	Wheel inner cover	TT47701
478	Shaft spring 12	TT47801
479	Gear left	TT47901
480	Gear pin	TT48001
481	inch bearing R8ZZ	TT48101
482	Rear axle housing	TT48201
483	E type spring 21	TT48301
484	GT transmission	TT48401
485	20 "belt hood	TT48501
486	key	TT48601
487	small pulley	TT48701
488	belt	TT48801
489	walkign rod	TT48901
490	gear right	TT49001
491	spring Transmisson	TT49101